

Grandstream DP-750 & Freephoneline.ca

*Comment configurer un modem téléphonique VOIP Grandstream DP-750
avec le fournisseur Freephoneline.ca*

Cet exemple utilise 2 comptes téléphoniques (2 lignes) avec 2 combinés téléphoniques DP-720.
Dans cette configuration, les combinés partagent indifféremment les 2 lignes.

Les configurations

1- PROFILES

1. Profile 1

Choisir dans le **Profile 1**


1.1 General Setting

- **Profile Name** **voip.freephoneline.ca**
- **SIP Server** **voip2.freephoneline.ca**
- **Voice Mail Access Number** ***98**

(Si vous avez plusieurs lignes leurs boîtes vocales, *98 fonctionnera pour chacune de vos lignes.)


Grandstream DP750

Admin Logout | Reboot | English ▼



GRANDSTREAM
CONNECTING THE WORLD

STATUS | PROFILES | DECT | SETTINGS | MAINTENANCE | PHONEBOOK



Version 1.0.3.23

Profiles

Profile 1

General Settings

Network Settings

SIP Settings

Audio Settings

Call Settings

Profile 2

Profile 3

Profile 4

General Settings

Profile Active

☐ No ☒ Yes

Profile Name

profile1

SIP Server

voip.freephoneline.ca

Failover SIP Server

voip2.freephoneline.ca

Prefer Primary SIP Server

☒ No ☐ Yes

Outbound Proxy

Voice Mail Access Number

*98

Save

Save and Apply

Reset

Grandstream Networks Support


Copyright © 2018. All Rights Reserved.

1.2 Network Settings


- **Nat Traversal** **Keep-Alive**

Grandstream DP750

Admin Logout | Reboot | English ▼

 **GRANDSTREAM**
CONNECTING THE WORLD

STATUS | PROFILES | DECT | **SETTINGS** | MAINTENANCE | PHONEBOOK

 Version 1.0.3.23

Profiles

Profile 1 ▾

General Settings

Network Settings

SIP Settings ▸

Audio Settings

Call Settings

Profile 2 ▸

Profile 3 ▸

Profile 4 ▸

Network Settings

Layer 3 QoS Settings

SIP Diff-Serv	<input type="text" value="24"/>
RTP Diff-Serv	<input type="text" value="46"/>

DNS Settings

DNS Mode	<input type="text" value="A Record" ▼"=""/>
Primary IP	<input type="text"/>
Backup IP 1	<input type="text"/>
Backup IP 2	<input type="text"/>

NAT Settings

NAT Traversal	<input type="text" value="Keep-Alive" ▼=""/>
Use NAT IP	<input type="text"/>
Proxy-Require	<input type="text"/>

Grandstream Networks Support


Copyright © 2018. All Rights Reserved

1.3 SIP Settings


1.3.1 Basic Settings

- SIP Transport **UDP**

Grandstream DP750
Admin Logout | Reboot | English ▼


GRANDSTREAM
CONNECTING THE WORLD

STATUS
PROFILES
DECT
SETTINGS
MAINTENANCE
PHONEBOOK


Version 1.0.3.23

Profiles

Profile 1
General Settings
Network Settings
SIP Settings
Basic Settings
Session Timer
Security Settings
Audio Settings
Call Settings
Profile 2
Profile 3
Profile 4

Basic Settings

SIP Transport
☒ UDP
☐ TCP
☐ TLS/TCP

SIP Registration
☐ No
☒ Yes

Unregister on Reboot
☐ No
☒ Yes

Add Auth Header On Initial REGISTER
☒ No
☐ Yes

Outgoing Calls Without Registration
☐ No
☒ Yes

Register Expiration

SIP Registration Failure Retry Wait Time

SIP Registration Failure Retry Wait Time upon 403 Forbidden

Reregister Before Expiration

Local SIP Port

Use Random SIP Port
☒ No
☐ Yes

Local RTP Port

SIP T1 Timeout

SIP T2 Timeout

SIP TIMER D

Remove OBP from Route
☒ No
☐ Yes

Support SIP Instance ID
☐ No
☒ Yes

Hold Target Before Refer
☒ No
☐ Yes

Refer-To Use Target Contact
☒ No
☐ Yes

SUBSCRIBE for MWI
☐ No
☒ Yes

Enable 100rel
☒ No
☐ Yes

TEL URI
☒ Disabled
☐ User=phone
☐ Enabled

Do Not Escape '#' as %23 in SIP URI
☒ No
☐ Yes

Disable Multiple m Line in SDP
☒ No
☐ Yes

Use Privacy Header
☒ Default
☐ No
☐ Yes

Use P-Preferred-Identity Header
☒ Default
☐ No
☐ Yes

Ignore Alert-Info header
☒ No
☐ Yes

Save

Save and Apply

Reset

1.4 Audio Setting

Laisser par défaut

1.5 Call Settings

Laisser par défaut

- **Dial Plan** { x+ | *x+ | *xx*x+ }

2- DECT

2.1 SIP Account Settings

Voici un exemple de configuration avec 2 lignes :

Configurer les 2 comptes

- Avec les mots de passes fournis par Freephoneline 1 : xxxxxxxx et Password 2 : xxxxxxxx
- **SIP User ID** et **Authenticate ID** Mettre vos numéros de téléphone comme sur l'image ci-dessous.
- **Active** Yes pour chaque compte que vous utilisez.

Facultatif :

- **Name** Ligne 1 et Ligne 2 (ou autres noms de votre choix qui seront visibles sur les combinés)
- **Profile** Dans cet exemple, nous utilisons le **Profile 1** pour tous les comptes.
- **HS Mode** Parallèle permet de faire sonner tous les combinés en même temps. Rappelez-vous à la documentation officielle du fabricant Grandstream si besoin.

Dépannage :

Si lors d'un appel sortant, vous entendez le message « This account number is not valid », vérifier si le numéro de téléphone est le bon dans **Authenticate ID**.

Account	SIP User ID	Authenticate ID	Password	Name	Profile	HS Mode	Active
Account 1	12223334444	12223334444		Ligne 1	Profile 1	Parallèle	<input checked="" type="radio"/> No <input type="radio"/> Yes
Account 2	12223335555	12223335555		Ligne 2	Profile 1	Parallèle	<input checked="" type="radio"/> No <input type="radio"/> Yes
Account 3					Profile 1	Parallèle	<input checked="" type="radio"/> No <input type="radio"/> Yes
Account 4					Profile 1	Parallèle	<input checked="" type="radio"/> No <input type="radio"/> Yes
Account 5					Profile 1	Parallèle	<input checked="" type="radio"/> No <input type="radio"/> Yes
Account 6					Profile 1	Parallèle	<input checked="" type="radio"/> No <input type="radio"/> Yes
Account 7					Profile 1	Parallèle	<input checked="" type="radio"/> No <input type="radio"/> Yes
Account 8					Profile 1	Parallèle	<input checked="" type="radio"/> No <input type="radio"/> Yes
Account 9					Profile 1	Parallèle	<input checked="" type="radio"/> No <input type="radio"/> Yes
Account 10					Profile 1	Parallèle	<input checked="" type="radio"/> No <input type="radio"/> Yes

Save Save and Apply Reset


Grandstream Networks Support Copyright © 2018. All Rights Reserved


2.2 Handset Line Settings

Dans cet exemple, les 2 combinés utiliseront les 2 lignes. La ligne 1 est celle par défaut.

Vous devez choisir quel combiné utilise quelle ligne :

Grandstream DP750
Admin Logout | Reboot
English


STATUS
PROFILES
DECT
SETTINGS
MAINTENANCE
PHONEBOOK


Version 1.0.3.23

DECT

Handset Line Settings

	LINE 1	LINE 2	LINE 3	LINE 4	LINE 5	LINE 6	LINE 7	LINE 8
HS 1	12223334444	12223335555	None	None	None	None	None	None
HS 2	12223334444	12223335555	None	None	None	None	None	None
HS 3	None	None	None	None	None	None	None	None
HS 4	None	None	None	None	None	None	None	None
HS 5	None	None	None	None	None	None	None	None

Save
Save and Apply
Reset

Handset Settings

HS1 Settings

HS2 Settings

HS3 Settings

HS4 Settings

HS5 Settings

Grandstream Networks Support
Copyright © 2018. All Rights Reserved.


3- Settings


3.1 Advanced Settings

Section Stun Setting

- **use Stun** **No** (il s'agit de la valeur par défaut)

Grandstream DP750
Admin Logout | Reboot | English ▼


STATUS | PROFILES | DECT | **SETTINGS** | MAINTENANCE | PHONEBOOK


Version 1.0.3.23


Settings
Network Settings
Basic Settings
Advanced Settings
Ring Tones
System Features

Advanced Settings

802.1X Mode

Disable ▼

802.1X Identity

MD5 Password


802.1X CA Certificate

Upload Delete

802.1X Client Certificate

Upload Delete

Enable LLDP

Enable LLDP
☐ Enabled ☒ Disabled

Layer 2 QoS Settings

Enable VLAN
☐ Enabled ☒ Disabled

Layer 2 QoS 802.1Q/VLAN Tag

Layer 2 QoS 802.1p Priority Value for SIP signaling

Layer 2 QoS 802.1p Priority Value for RTP media

STUN Settings

Use STUN
☒ No ☐ Yes

STUN server

Number of STUN Response Misses Allowed

Keep-Alive Interval

UPnP Discovery Settings

Enable UPnP discovery
☐ No ☒ Yes

UPnP discovery notify interval

Save Save and Apply Reset

Grandstream Networks Support
Copyright © 2018. All Rights Reserved.